NETAFIM™
An Orbia business.



Arad Smart Meter

Instructions for Accessing and Logging In 2.0.23 Software

Software Versions

BLE Controller - Bluetooth Enabled

Software Version	Supported Octave versions
New Version 2.0.23	SW4.02 with a 2025 manufacturing date
Current Version 1.0.54	SW4.02 and earlier Octave versions
Legacy Version 1.0.35	SW4.01 and older


Request access, download, and install

Step 1:

Request a user account by filling in the Arad Smart Meter user form.

Step 2:

You will receive an email with your username and password. Please keep your username and password somewhere safe.

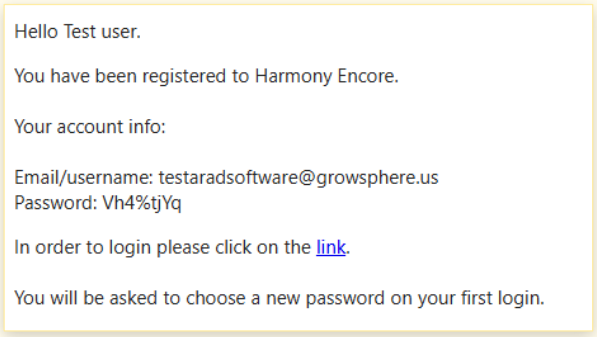

Hello Test user.

You have been registered to Harmony Encore.

Your account info:

Email/username: testaradsoftware@growsphere.us
Password: Vh4%tjYq


In order to login please click on the link.

You will be asked to choose a new password on your first login.

Note: **Do not** click on the login link – you will use your username and password when logging into the Arad Smart Meter Software.

Step 3:

Download and install the software. A link can be found on the Netafim USA Resources page – under the water meter section.

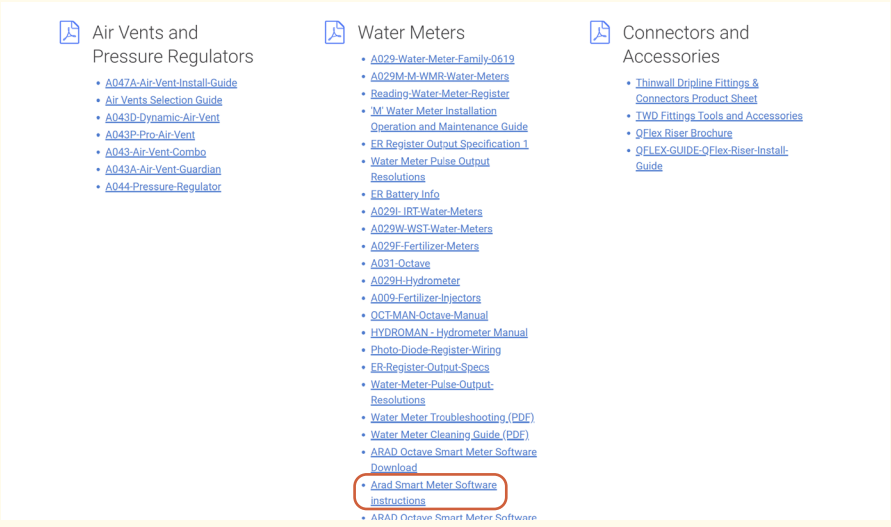

Air Vents and Pressure Regulators

- A047A-Air-Vent-Install-Guide
- Air Vents Selection Guide
- A043D-Dynamic-Air-Vent
- A043P-Pro-Air-Vent
- A043-Air-Vent-Combo
- A043A-Air-Vent-Guardian
- A044-Pressure-Regulator

Water Meters

- A029-Water-Meter-Family-0619
- A029M-M-WMR-Water-Meters
- Reading-Water-Meter-Register
- 'M' Water Meter Installation Operation and Maintenance Guide
- ER Register Output Specification 1
- Water Meter Pulse Output Resolutions
- ER Battery Info
- A029I- IRT-Water-Meters
- A029W-WST-Water-Meters
- A029F-Fertilizer-Meters
- A031-Octave
- A029H-Hydrometer
- A009-Fertilizer-Injectors
- OCT-MAN-Octave-Manual
- HYDROMAN - Hydrometer Manual
- Photo-Diode-Register-Wiring
- ER-Register-Output-Specs
- Water-Meter-Pulse-Output-Resolutions
- Water Meter Troubleshooting (PDF)
- Water Meter Cleaning Guide (PDF)
- ARAD Octave Smart Meter Software Download
- Arad Smart Meter Software instructions
- ARAD Octave Smart Meter Software


Connectors and Accessories

- Thinwall Dripline Fittings & Connectors Product Sheet
- TWD Fittings Tools and Accessories
- QFlex Riser Brochure
- QFLEX-GUIDE-QFlex-Riser-Install-Guide

Open the software and log in

Step 4:

Open the Arad Smart Meter software and click **Connect** on the start screen.

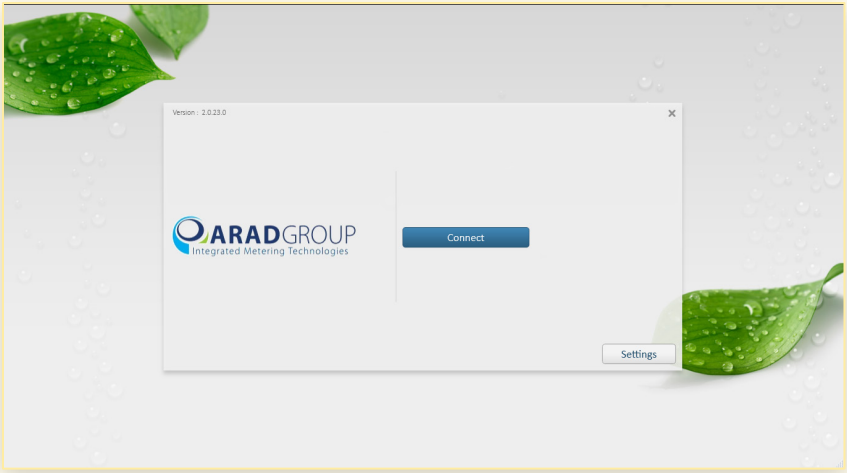


Step 5:

The login screen appears. Sign in with the username and password from your email.

Note: Before any field visit, please keep the following in mind.


- An internet connection is required to verify your account. If you plan to use the software in the field, log in within 24 hours of your visit.
- Logging in saves an access token on your device for 24 hours.
- If the token has expired and your device is offline, you will not be able to log in.

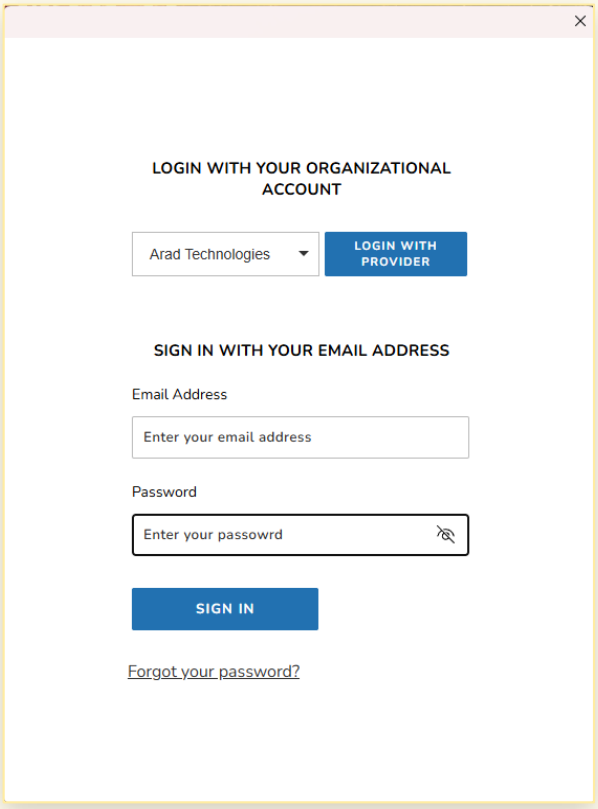

Reset your password and sign in

Step 6:

If this is your first time logging in, you will be prompted to reset your password.

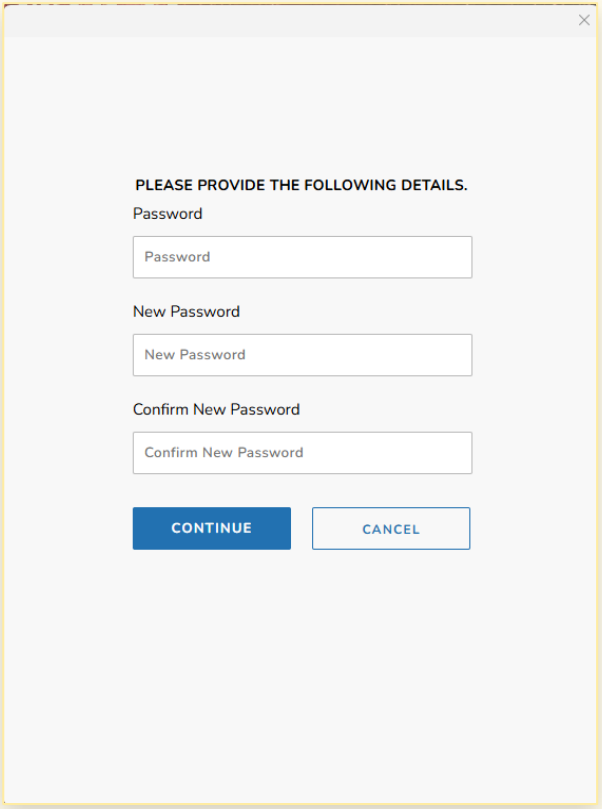


Step 7:

Log in with your email address and your new password.

Note: Note: To log in successfully,


1. Octave or Sonata meter must be connected with the programming cable.
2. If it is not, you will see an error message.

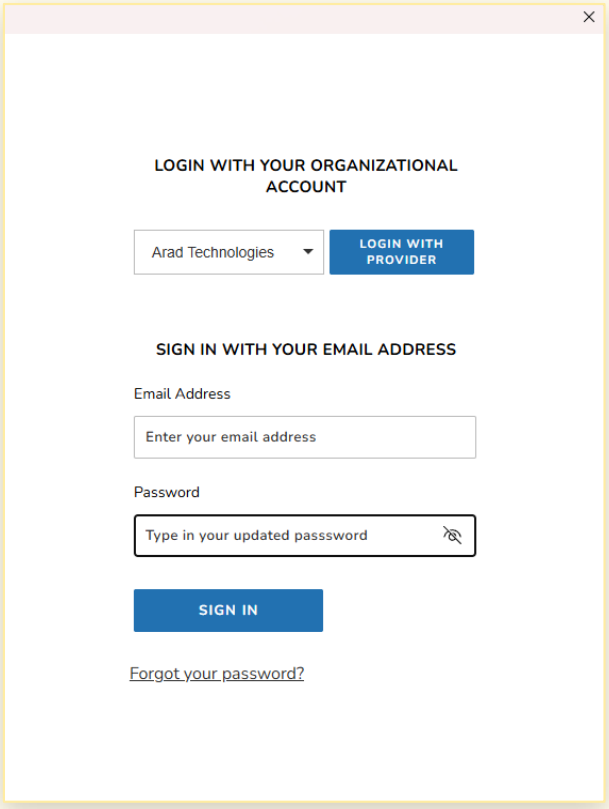

Confirm the connection and program

Step 8:

When the “Loading Meter Data” message appears, you are connected to the meter and logged in.

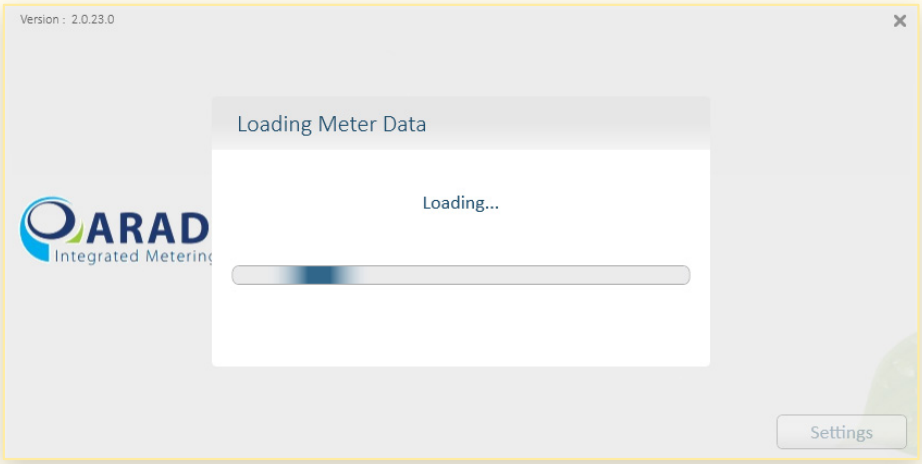


Step 9:

Complete the required programming.

New to Octave or Sonata meters?

Contact your Netafim Key Account Manager to schedule a training session first.

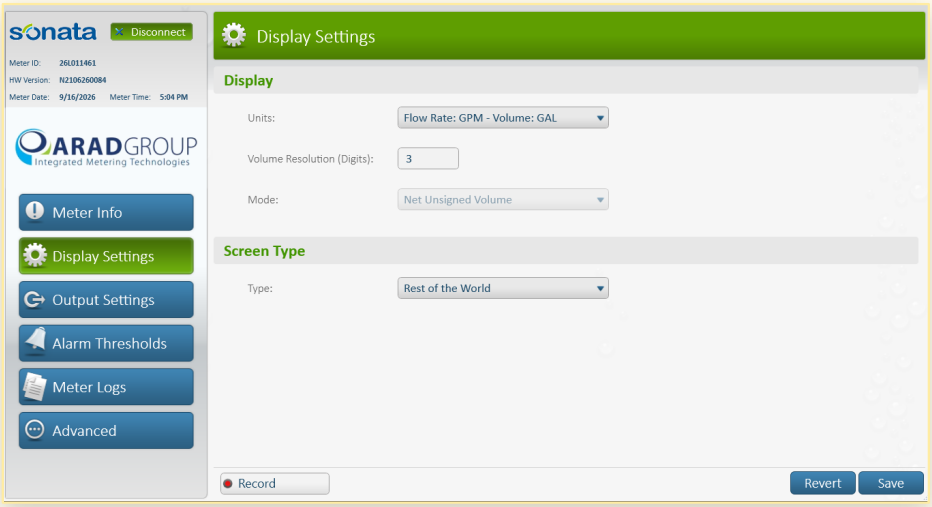

Disconnect when you’re finished

Step 10:

Always disconnect when you’re done programming the Octave or Sonata meters.

Note: Before any field visit, make sure you are connected to the Octave or Sonata meter and have logged in at least once in the past 24 hours.

